



Primus 600

Installation Guide


Install 50mm
above water
level

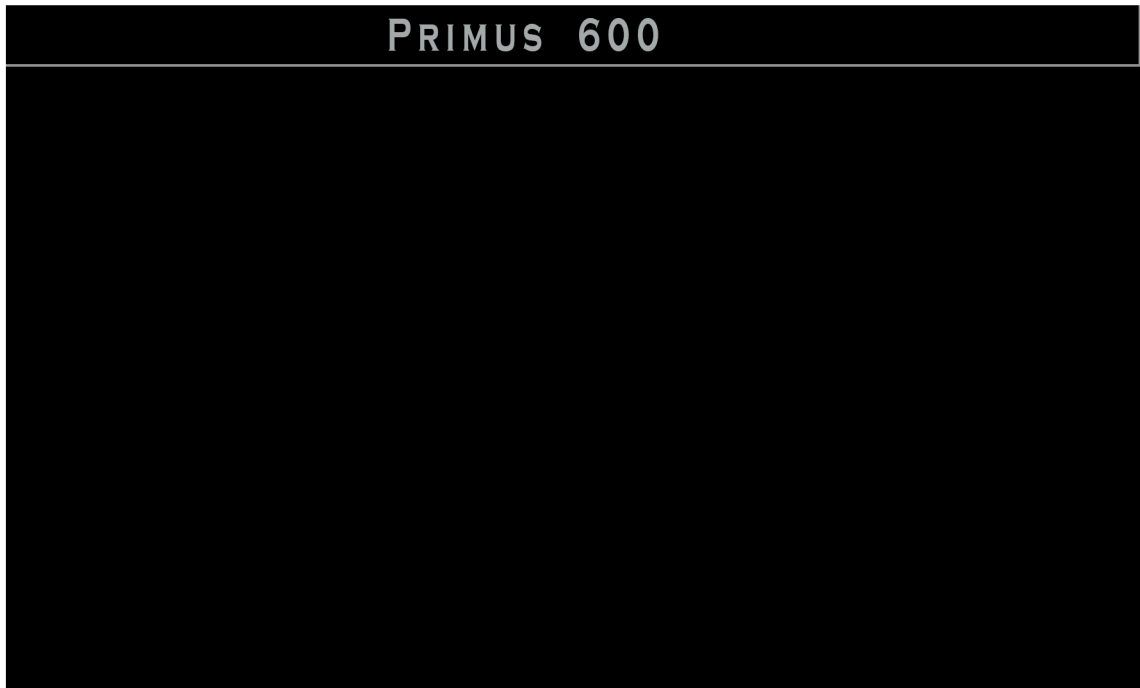

Auto
Top
Up

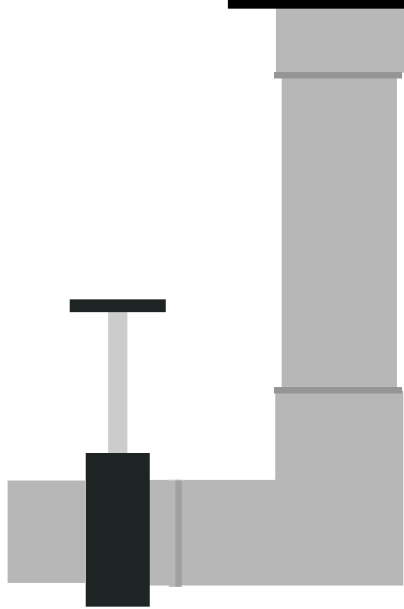

4" Inlet from bottom
drain.
Fit 4" slide valve or
Ball Valve. Make sure
the valve is supported.

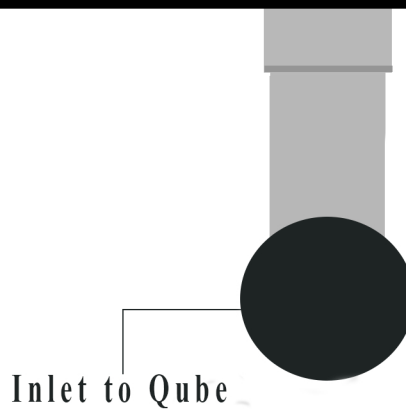

Inlet to Qube

Use 4" Rubber
connector



1.5" Valve

To Waste

You can also
connect to the
Qubes waste system